

# LPR Scanning

When in LPR mode in OPS-COM for Android the handheld unit will keep a running list of reads as you patrol. This list will contain flags that give you information about the vehicle being scanned.

- [Interpreting LPR flags](#)
- [Running Scan Total](#)
- [Visual Indicators During Scanning](#)
- [Plates that are Valid](#)
- [Plates Chalked](#)
- [Toggle PL8-RDR Scanning](#)
- [Related Pages](#)

---


## Interpreting LPR flags

Here we have a typical LPR display. Notice the last read plate came from the right side Camera (indicated by the orange arrow beside the plate image)


PL8-RDR LPR Scanning

LPR Proxy Connected STATUS

Any Parking Group    Any Zone

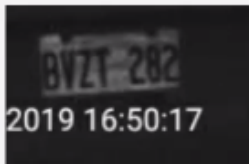


BVZT282-CANON  
78.0



---

BVZT282

...
ON



**BVZT282**

Chalked: 3 mins ago; no location details

---

RECENT LPR RESULTS 30

ARBW512-CANON	ARBW512	TT-mobile	81.0
AJ59962-CANON	AJ59962	TT-mobile	80.0
BLWW707-CANON	BLWW707	TT-mobile	74.0
BEKY531-CANON	BEKY531	TT-mobile	83.0
BEKS401-CANON	BEKS401	TT-mobile	78.0
BBKP924-CANON	BBKP924	TT-mobile	77.0
AWTP112-CANON	AWTP112	TT-mobile	78.0
AWAJ471-CANON	AWAJ471	TT-mobile	75.0


Running Scan Total

The running total of how many reads you have done in a session is located on the right, just above the read list.  
In this case we have 30 reads total.


PL8-RDR LPR Scanning

LPR Proxy Connected STATUS

Any Parking Group    Any Zone

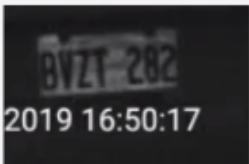



BVZT282-CANON  
78.0



---









BVZT282 ... ON

 **BVZT282**  
Chalked: 3 mins ago; no location details



---

RECENT LPR RESULTS 30

 ARBW512-CANON	ARBW512	TT-mobile	81.0
 AJ59962-CANON	AJ59962	TT-mobile	80.0
 BLWW707-CANON	BLWW707	TT-mobile	74.0
 BEKY531-CANON	BEKY531	TT-mobile	83.0
 BEKS401-CANON	BEKS401	TT-mobile	78.0
 BBKP924-CANON	BBKP924	TT-mobile	77.0
 AWTP112-CANON	AWTP112	TT-mobile	78.0
 AWAJ471-CANON	AWAJ471	TT-mobile	75.0

### Visual Indicators During Scanning


Plates in Violation

Reads that are in violation are indicated by a red flag.


PL8-RDR LPR Scanning

LPR Proxy Connected STATUS


Any Parking Group Any Zone
















BVZT282-CANON 78.0



BVZT282 ... ON

 **BVZT282**  
Chalked: 3 mins ago; no location details

RECENT LPR RESULTS 30

 ARBW512-CANON	ARBW512	TT-mobile	81.0
 AJ59962-CANON	AJ59962	TT-mobile	80.0
 BLWW707-CANON 	BLWW707	TT-mobile	74.0
 BEKY531-CANON 	BEKY531	TT-mobile	83.0
 BEKS401-CANON 	BEKS401	TT-mobile	78.0
 BBKP924-CANON	BBKP924	TT-mobile	77.0
 AWTP112-CANON 	AWTP112	TT-mobile	78.0
 AWAJ471-CANON 	AWAJ471	TT-mobile	75.0


Plates that are Valid

Reads that are valid are flagged as green. Valid reads will list on the handheld unit but will not be chalked or passed into the system as part of the LPR events report.


## PL8-RDR LPR Scanning

● LPR Proxy Connected
 STATUS

Any Parking Group
Any Zone

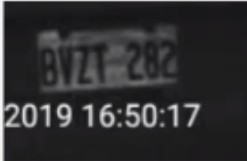


BVZT282-CANON  
78.0



# BVZT282

...
ON



## BVZT282

Chalked: 3 mins ago; no location details

### RECENT LPR RESULTS 30

ARBW512-CANON	ARBW512	TT-mobile	81.0
AJ59962-CANON	AJ59962	TT-mobile	80.0
BLWW707-CANON	BLWW707	TT-mobile	74.0
BEKY531-CANON	BEKY531	TT-mobile	83.0
BEKS401-CANON	BEKS401	TT-mobile	78.0
BBKP924-CANON	BBKP924	TT-mobile	77.0
AWTP112-CANON	AWTP112	TT-mobile	78.0
AWAJ471-CANON	AWAJ471	TT-mobile	75.0




Plates Chalked

Reads that are still in the grace period configured in your system will be indicated by an orange flag.


## PL8-RDR LPR Scanning

● LPR Proxy Connected
 STATUS

Any Parking Group
Any Zone

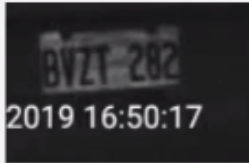


BVZT282-CANON  
78.0



# BVZT282

...
ON



## BVZT282

Chalked: 3 mins ago; no location details

### RECENT LPR RESULTS 30

ARBW512-CANON	←←	ARBW512	TT-mobile	81.0
AJ59962-CANON	←←	AJ59962	TT-mobile	80.0
BLWW707-CANON		BLWW707	TT-mobile	74.0
BEKY531-CANON		BEKY531	TT-mobile	83.0
BEKS401-CANON		BEKS401	TT-mobile	78.0
BBKP924-CANON		BBKP924	TT-mobile	77.0
AWTP112-CANON		AWTP112	TT-mobile	78.0
AWAJ471-CANON		AWAJ471	TT-mobile	75.0

## Toggle PL8-RDR Scanning

When editing a plate read the system will go into offline mode. This is indicated by the green button shown below changing to red. To continue scanning plates be sure to engage the ON button, make sure it's green before continuing.


# PL8-RDR LPR Scanning

LPR Proxy Connected

STATUS

Any Parking Group

Any Zone

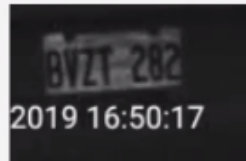

BVZT282-CANON  
78.0



## BVZT282

... **ON**



### BVZT282

Chalked: 3 mins ago; no location details

### RECENT LPR RESULTS

30

ARBW512-CANON	ARBW512	TT-mobile	81.0
AJ59962-CANON	AJ59962	TT-mobile	80.0
BLWW707-CANON	BLWW707	TT-mobile	74.0
BEKY531-CANON	BEKY531	TT-mobile	83.0
BEKS401-CANON	BEKS401	TT-mobile	78.0
BBKP924-CANON	BBKP924	TT-mobile	77.0
AWTP112-CANON	AWTP112	TT-mobile	78.0
AWAJ471-CANON	AWAJ471	TT-mobile	75.0
AT20080-CANON	AT20080	TT-mobile	75.0

## Related Pages

- [Automatic Violation Notice](#)
- [Edit a Violation](#)
- [First Time Installation - Android](#)
- [for Enforcement - Handhelds](#)
- [Issuing a Person Violation](#)
- [Issuing a Plate Violation](#)
- [Locate Application Version](#)
- [Module 9 - Handheld Training](#)
- [Permit Misuse Notification](#)
- [Reset Settings for OPS-COM for Android](#)
- [Search for a Violation](#)
- [Security PIN on Violations - How is it used](#)
- [Ticket Warnings Explained](#)